E1054 24AMP BATTERY CHARGER 12V – 12V
12V Turn On



FRONT VIEW



REAR VIEW

12V – 12V BATTERY CHARGER 24AMP
HIGH SPECIFICATION
MANUFACTURED IN THE UK

- **PART NO: E1054**
- **TYPE: SWITCH MODE BATTERY CHARGER**
- **Maximum Output (Charging) Current: 24A (PVin = 13V)**
- **Output Voltage (V-out): 14.0V ± 0.1V**
- **Power Input Voltage (PVin): 11V to 14V**
- **Control Input Voltage (CVin): Charger Enabled: >12.1V**
- **Overload Protection: Yes**
- **Thermal shutdown: Yes**
- **Polarity Protection: External Fuses Input = 30A / Output = 30A**
- **Connections: Red = Positive Input**
  Black = Negative Input, Output and Control
  Blue = Positive Output
  Pink = Positive Control
- **Physical Dimensions: 285 x 100 x 75mm**
- **Mountings: 4 x Ø 5.5mm Holes**
- **Construction: Anodised Cooling Profile**

MODELS ALSO AVAILABLE: 12AMP / 36AMP / 48AMP / 60AMP / 72AMP

WHY NOT VISIT OUR WEBSITES TO VIEW THE OTHER PRODUCTS WE MANUFACTURE:

http://www.battery-management-voltage-converter.com
This site covers our:

- **Battery Management Systems**
- **Split Charge Controllers**
- **DC-DC Battery Chargers**
- **DC-DC Voltage Converters**
- **Trailer Voltage Converters**
- **Battery Status Indicators**
- **Voltage Sensitive Switches.**

http://www.eurogroup-gb.com
This site covers our Range of:


- **Water Level Monitors**
- **Water Level Probes**
- **Temperature Monitors**
- **Temperature Probes**
- **Air Conditioning Fan Control Units**
- **Vehicle Flashers and Interrupters**
- **Light Control Units**
- **Oil Level Monitors**
- **Oil Level Probes**
- **Hydraulic Control Units**
- **Audible Warning Devices**
- **Reversing Alarms**
- **Timers**
- **Vehicle Safety and Security Units**
- **Digital Speed Switches**
- **Solenoid Controllers**
- **Relays, Connectors, Lamps, Switches**
- **Earth Straps**
- **Looms and Wiring Harnesses**
- **Transformer and Coil Winding**
- **Mechanical Assembly**
- **Special Purpose Electrical / Electronic Assembly**
- **Encapsulation and Formal Coating**
- **Vacuum Formed Parts**
- **Printed Circuit Board Assembly**

EURO MANUFACTURING AND MARKETING LIMITED
Euro Works, 11-13 High Street, Wem, Shropshire SY4 5AA, England.
Tel: +44 (0) 1939 235073 Fax: +44 (0) 1939 235074
Email: sales@eurogroup-gb.com OR sales@battery-management-voltage-converter.com
Web Site: www.eurogroup-gb.com OR www.battery-management-voltage-converter.com

BEFORE INSTALLATION YOU NEED TO PURCHASE:	RECOMMENDED MINIMUM CABLES SIZES:
2 X 30A AUTOMOTIVE BLADE FUSE (COLOUR: GREEN) 1 X 1A AUTOMOTIVE BLADE FUSE (COLOUR: BLACK) 3 X INLINE FUSE HOLDER (TO TAKE BLADE FUSES)	INPUT (RED): 6mm² CONDUCTOR CROSS SECTION (84/0.3mm) OUTPUT (BLUE): 6mm² CONDUCTOR CROSS SECTION (84/0.3mm) GROUND (BLACK): 2.5mm² CONDUCTOR CROSS SECTION (35/0.3mm)

The Charger starts when the voltage reaches approximately 12V.
This Unit = 2 X E914 12A Battery Chargers wired in parallel to form a single 24A module


Wired as a fully automatic Charger
The Pink Control Wire Connection is wired directly to the +ve Connection of the 12V Cranking (Donor) Battery to switch the Charger on and off automatically.
In this case the Control Wire Connection senses the 12V Cranking (Donor) Battery Voltage and switches the Charger on only when the 12V Cranking (Donor) Battery is being charged.
The Unit automatically controls the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged and prevents the 12V Cranking Battery (Donor Battery) from becoming flat / exhausted.

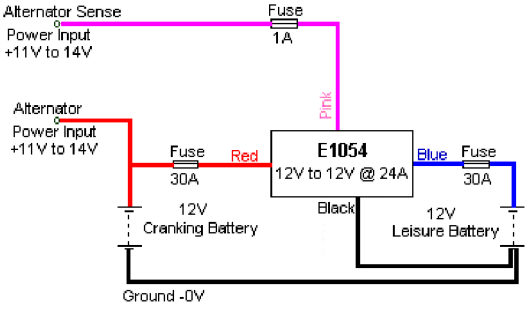

Wired to only operate when the engine is running
The Pink Control Wire connection is wired to any +ve connection which becomes live when the Ignition is switched on. The Unit automatically controls the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged.

Wired as a manually operated Charger
The Pink Control Wire Connection is wired via a Switch to the +ve Connection of the 12V Cranking (Donor) Battery to switch the Charger on and off manually.
In this case the Operator can control when the Battery Charger is switched on or off.

If left on, the Unit will automatically control the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged and prevent the 12V Cranking Battery (Donor Battery) from becoming flat / exhausted.

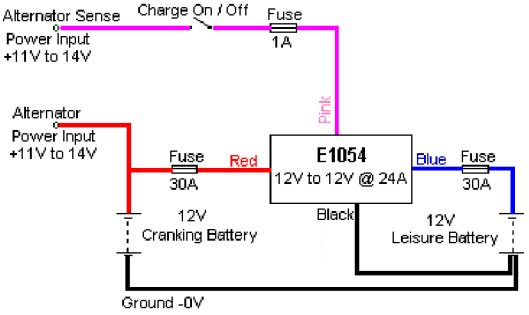

This Battery Charger has been designed using a building block system to obtain the power needed to suit your requirements
This Unit can be provided with a Charging Indicator.
To request a Charging Indicator, please add an "L" to the Part Number, i.e.: E1054-L

INSTALLATION INSTRUCTIONS:

1. **CONNECT A BLACK LEAD FROM THE –VE CONNECTION OF THE 12V CRANKING / DONOR BATTERY TO THE –VE CONNECTION OF THE 12V LEISURE / AUXILIARY BATTERY (COMMON NEGATIVE)**

2. **CONNECT A BLACK LEAD FROM THE BATTERY CHARGER TO THE -VE CONNECTION OF THE 12V LEISURE / AUXILIARY BATTERY**

3. **CONNECT THE BLUE OUTPUT CONNECTION TO THE +VE CONNECTION OF THE 12V LEISURE / AUXILIARY BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 30A BLADE FUSE BETWEEN THE 12V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT)**

4. **CONNECT THE RED INPUT CONNECTION TO THE +VE CONNECTION OF THE 12V CRANKING / DONOR BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 30A BLADE FUSE BETWEEN THE 12V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT)**

5. **THE PINK CONTROL LEAD CONNECTION GIVES YOU THE OPTION TO SWITCH THE BATTERY CHARGER ON AND OFF USING A STANDARD LOW CURRENT SWITCH.**

6. **ALTERNATIVELY YOU CAN CONNECT THE PINK LEAD TERMINAL DIRECTLY TO THE POSITIVE INPUT, IE: THE +VE CONNECTION ON THE 12V CRANKING / DONOR BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 1A BLADE FUSE BETWEEN THE 12V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT) WHICH WILL ENABLE YOU TO RUN THE BATTERY CHARGER ALL THE TIME.**

7. **ALTERNATIVELY YOU CAN CONNECT THE PINK LEAD TERMINAL DIRECTLY TO ANY +VE CONNECTION WHICH BECOMES LIVE WHEN THE IGNITION IS SWITCHED ON (FITTING 1 X INLINE FUSE HOLDER WITH 1A BLADE FUSE BETWEEN THE +VE 12V CONNECTION AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT) WHICH WILL ENABLE YOU TO RUN THE BATTERY CHARGER ONLY WHEN THE ENGINE IS RUNNING**

IF IN DOUBT, PLEASE CONSULT AN AUTOMOTIVE ELECTRICIAN OR TELEPHONE US ON 01939 235073