E787 30AMP BATTERY CHARGER 12V – 24V

12V – 24V BATTERY CHARGER 30AMP
Charge a 24V Battery from a 12V Battery System
HIGH SPECIFICATION
MANUFACTURED IN THE UK



Picture representative of range

- **PART NO: E787**
- **TYPE: SWITCH MODE STEP UP BATTERY CHARGER**
- **CHARGING CURRENT: 30 AMP**
- **INPUT VOLTAGE: 11 – 15V DC**
- **OUTPUT VOLTAGE: 28V DC**
- **OVERLOAD PROTECTION: EXTERNAL FUSE**
- **POLARITY PROTECTED: EXTERNAL FUSE**
- **HIGH TEMP PROTECTED: YES**
- **SHORT CIRCUIT PROTECTION: EXTERNAL FUSE**
- **EFFICIENCY: > 85%**
- **DIMENSIONS: 320mm X 195mm X 55mm**
- **FIXING CENTRES: 300mm X 175mm (4 HOLE FIXING)**
- **HOLE SIZE: 6mm**
- **WEIGHT: 1860g**
- **CONSTRUCTION: 3 X E720 (10A) UNITS MOUNTED ON A SINGLE ALUMINUM PLATE**

MODELS ALSO AVAILABLE: 10AMP / 20AMP / 40AMP / 50AMP / 60AMP / 70AMP / 80AMP

OEM AND TRADE ENQUIRIES WELCOME

WHY NOT VISIT OUR WEBSITES TO VIEW THE OTHER PRODUCTS WE MANUFACTURE:

http://www.battery-management-voltage-converter.com
This site covers our:
- **Battery Management Systems**
- **Split Charge Controllers**
- **DC-DC Battery Chargers**
- **DC-DC Voltage Converters**
- **Trailer Voltage Converters**
- **Battery Status Indicators**
- **Voltage Sensitive Switches.**

http://www.eurogroup-gb.com
This site covers our Range of:
- **Water Level Monitors**
- **Water Level Probes**
- **Temperature Monitors**
- **Temperature Probes**
- **Air Conditioning Fan Control Units**
- **Vehicle Flashers and Interrupters**
- **Light Control Units**
- **Oil Level Monitors**
- **Oil Level Probes**
- **Hydraulic Control Units**
- **Audible Warning Devices**
- **Reversing Alarms**
- **Timers**
- **Vehicle Safety and Security Units**
- **Digital Speed Switches**
- **Solenoid Controllers**
- **Relays, Connectors, Lamps, Switches**
- **Earth Straps**
- **Looms and Wiring Harnesses**
- **Transformer and Coil Winding**
- **Mechanical Assembly**
- **Special Purpose Electrical / Electronic Assembly**
- **Encapsulation and Formal Coating**
- **Vacuum Formed Parts**
- **Printed Circuit Board Assembly**

EURO MANUFACTURING AND MARKETING LIMITED
Euro Works, 11-13 High Street, Wem, Shropshire SY4 5AA, England.
Tel: +44 (0) 1939 235073 Fax: +44 (0) 1939 235074
Email: sales@eurogroup-gb.com OR sales@battery-management-voltage-converter.com
Web Site: www.eurogroup-gb.com OR www.battery-management-voltage-converter.com

BEFORE INSTALLATION YOU NEED TO PURCHASE:
1 X 1A AUTOMOTIVE BLADE FUSE
1 X INLINE FUSE HOLDER (TO TAKE BLADE FUSES)


The Charger starts when the voltage reaches >10V.

This Battery Charger allows you to charge a 24V Battery from a 12V Battery System.

The Battery Charger can be wired in 3 ways:

Wired as a fully automatic Charger


The Brown Control Wire is wired directly to the +ve Connection of the 12V Cranking (Donor) Battery to run the Charger all the time.
The Unit automatically controls the maximum charge into the 24V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged.

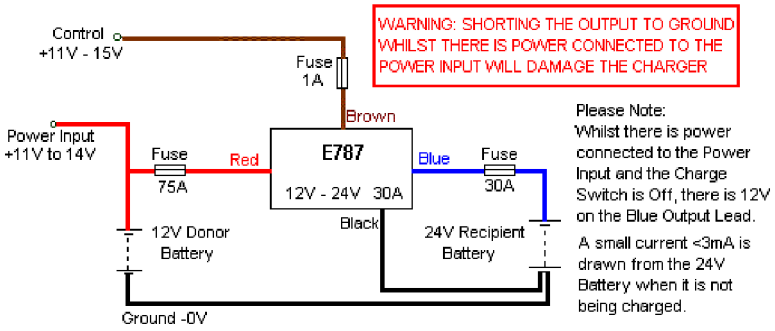

Wired to only operate when the engine is running
The Brown Control Wire is wired to any +ve connection which becomes live when the Ignition is switched on. The Unit automatically controls the maximum charge into the 24V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged.

Wired as a manually operated Charger

The Brown Control Wire is wired via a Switch to the +ve Connection of the 12V Cranking (Donor) Battery to switch the Charger on and off manually.
In this case the Operator can control when the Battery Charger is switched on or off.
If left on, the Unit will automatically control the maximum charge into the 24V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged.

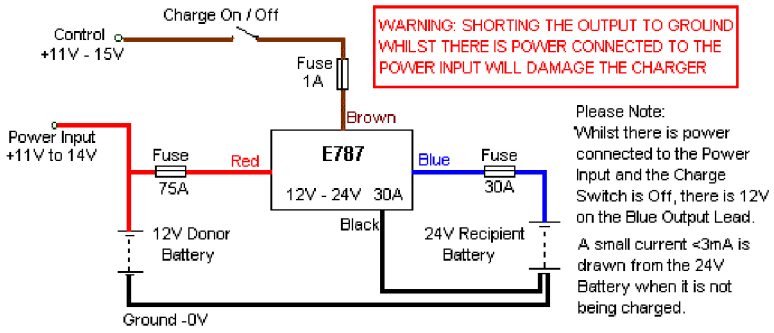

INSTALLATION INSTRUCTIONS:

1. **CONNECT THE BLUE LEAD CONNECTION TO THE +VE CONNECTION OF THE 24V LEISURE / AUXILIARY BATTERY**
2. **CONNECT A BLACK LEAD FROM THE –VE CONNECTION OF THE 12V CRANKING / DONOR BATTERY TO THE –VE CONNECTION OF THE 24V LEISURE / AUXILIARY BATTERY (COMMON NEGATIVE)**
3. **CONNECT A BLACK LEAD FROM THE BLACK CONNECTION ON THE BATTERY CHARGER TO THE -VE CONNECTION OF THE 24V LEISURE / AUXILIARY BATTERY**
4. **CONNECT THE RED LEAD CONNECTION TO THE +VE CONNECTION OF THE 12V CRANKING BATTERY**
5. **THE BROWN CONTROL CONNECTION LEAD GIVES YOU THE OPTION TO SWITCH THE BATTERY CHARGER ON AND OFF USING A STANDARD LOW CURRENT SWITCH.**
6. **ALTERNATIVELY YOU CAN CONNECT THE BROWN LEAD DIRECTLY TO THE POSITIVE INPUT, IE: THE +VE CONNECTION ON THE 12V BATTERY, WHICH WILL ENABLE YOU TO RUN THE BATTERY CHARGER ALL THE TIME.**
7. **ALTERNATIVELY YOU CAN CONNECT THE BROWN LEAD DIRECTLY TO ANY +VE CONNECTION WHICH BECOMES LIVE WHEN THE IGNITION IS SWITCHED ON, WHICH WILL ENABLE YOU TO RUN THE BATTERY CHARGER ONLY WHEN THE ENGINE IS RUNNING**

IF IN DOUBT, PLEASE CONSULT AN AUTOMOTIVE ELECTRICIAN OR TELEPHONE US ON 01939 235073

EURO MANUFACTURING AND MARKETING LIMITED
Euro Works, 11-13 High Street, Wem, Shropshire SY4 5AA, England.
Tel: +44 (0) 1939 235073 Fax: +44 (0) 1939 235074
Email: sales@eurogroup-gb.com OR sales@battery-management-voltage-converter.com
Web Site: www.eurogroup-gb.com OR www.battery-management-voltage-converter.com